
# Health & Safety Systems

# WINDOWS & VENTILATOR

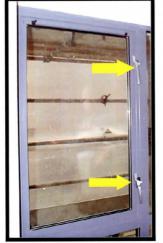

#### To open window for ventilation


- Insert key and turn to unlock each handle
- Push keyhole button inwards to release lock

### To close and secure the window

- Pull the window shut and turn both handles until the keyhole buttons automatically re-engage and lock the window handles
- Insert key to lock handle
- Try handle to check handle is locked

### Permanent Window Opening Restrictors

For your safety, these windows are fitted with a permanent restrictor, which is designed to only allow a window to be partially opened for ventilation **see figure A** 

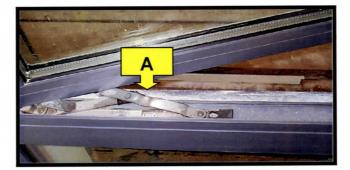

#### To Open & Close Trickle Ventilator

- A manually operated ventilator is located along the top of the window frame
- The flap is opened and closed by rolling the knob at either end of the ventilator



# Health & Safety Systems

# SLIDING BALCONY DOORS & VENTILATOR

## To Unlock and Open the Door




- Insert key and turn to unlock black lever
- Lift black lever up to disengage the 4 door bolts


## To Close and Secure the Door

- Fully push door until tightly closed
- Press black lever down to engage the bolts
- Turn key to lock handle
- Try handle to check door is locked

## To Open & Close Trickle Ventilator

- A manually operated ventilator is located along the top of the doorframe
- To ensure that, when the ventilator is closed, the gap is effectively sealed considerable pressure is required to open and close the flap
- When opening and closing the flap it is recommended that pressure should be exerted at both ends and the central area of the ventilator

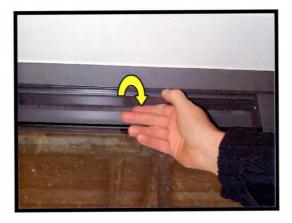

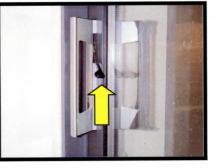

# Health & Safety Systems

## **SWING DOORS**

### To open door

- Insert key and turn to unlock the handle
- Push handle down firmly to release multi-point lock system

### To close door on latch only

Push door until latch engages

### To close and lock door

- Push door until latch engages
- Lift handle firmly upwards to engage multi-point lock system
- · Insert key and turn to lock the handle
- Try handle to ensure lock is engaged

## AIR EXTRACTION SYSTEM

The apartment is equipped with a series of electrical extractor fans in Kitchen, Bathrooms and Ensuite. Ducting from these ventilator units leads to external terminal units.

Fans are operated as follows: -

- In the Kitchen from an on/off switch on the Grid Panel
- In other locations turned on in-conjunction with the room light switch, and turned off automatically, after an

adjustable time lapse (factory set to 3 minutes) following the light switch being turned off

 A separate isolation switch for maintenance purposes is also fitted at a high level outside the Bathrooms and Ensuite

Unit casings should be cleaned with a damp cloth on a regular basis

### [See manufacturer's operating instructions for further details]

### NOTE

### Manufacturer

 Vectaire Ltd. Lincoln Road, Cressex Business Park, High Wycombe, Bucks HP12 3RH Telephone 01494-522333

## Cooker Hood

• The fan in this unit recycles air; it is not connected to the ducted system [See manufacturer's operating instructions for further details]

